


## Brf Sadelbyn 2 – Instruktioner för eldning

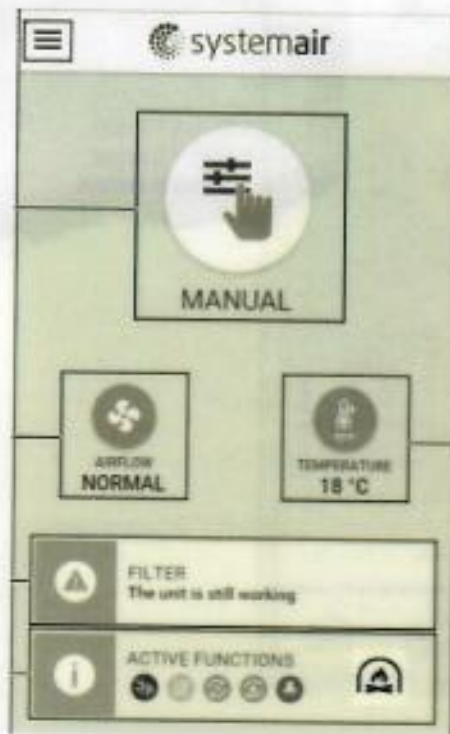


1. Välj Manual
2. Välj Eldstad
3. Aktivera 30 min

- 1) Det finns en inbyggd funktion i ventilationsaggregatet i badrummet "Eldstad" som måste startas före upptändning. Denna skapar ett övertryck vilket underlättar upptändning av kaminen. Ställ den på 30 minuter.
- 2) Se till att köksfläkten är avstängd.
- 3) Öppna luckan till kaminen för att övertrycksluften ska vända på kallraset i rökröret. Se noga till att alla luftventiler i kaminen är öppna. Lägg därefter in ett par större vedträn i botten. Det är viktigt att veden är både kluven och torr. Vedkubbarna kan gärna vara i storlek med en knytnäve.
- 4) Lägg ett lager med upptändningsved ovanpå vedkubbarna, gärna i 2-3 lager. Se till att det är ordentligt med luft runt omkring, ha ett avstånd på ca 1 cm mellan varje vedpinne. Upptändningsveden får inte vara för grov, små vedträn och flisor som är 2-4 cm tjocka. Toppa tändningen med tändningspapper eller tändved för att få i gång draget ordentligt.
- 5) Sista steget är enkelt, tänd! Eftersom draget är dåligt kan det vara en idé att ha luckan lite på glänt tills det har blivit ordentligt varmt och drag.

(English – turn the page)

## Brf Sadelbyn 2 – Instructions for light a fire in the stove

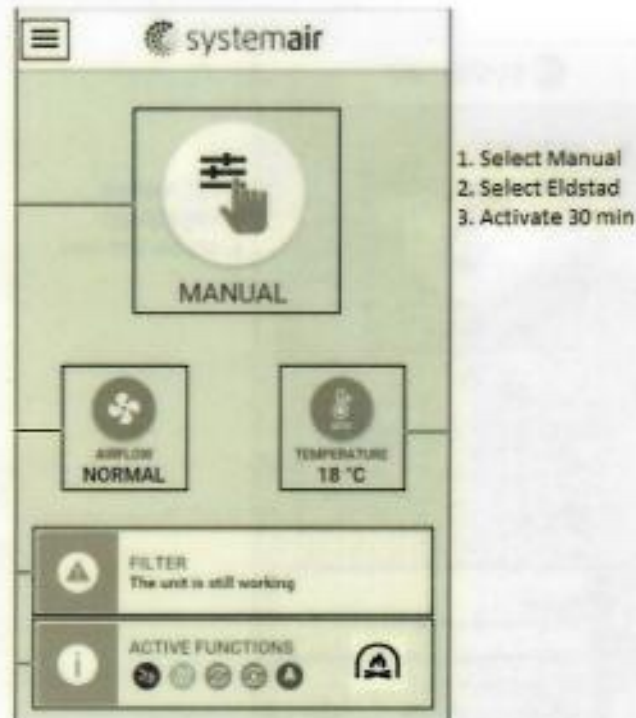

- 1) There is a built-in function in the ventilation unit in the bathroom "Eldstad" that you must start before you light the fire in the stove. This creates an overpressure which facilitates lighting of the stove. Activate this to 30 minutes.
- 2) Make sure the cooker hood is turned off.
- 3) Open the stove door to allow the overpressure air to get out in the smoke pipe. Make sure all air valves in the fireplace are open. Then insert a pair of larger woods in the bottom. It is important that the wood is both divided in small parts and dry. The wood may be in size with a fist.
- 4) Add a layer of smaller wood on top of the wood piles, preferably 2-3 layers. Make sure that there is air around all around, spacing about 1 cm between each woodpecker. The wood must not be too rough, small wood and tiles that are 2-4 cm thick. Top the ignition with paper to get the fire to start properly.
- 5) The last step is simple, lit! It may be a good idea to have the stove door a little open until it has been warm and tight.